


BOMOER

SHANGHAI

量体部位 (Measuring parts)		量体示意图 (Pics)	中文描述	English Description
领围 (Neck)			测量领子扣中到扣眼中的距离	Measure the distance from button center to the buttonhole center of collar
胸围 (Chest)			要求将衣服舒展放平，搭门叠好，下端一粒扣不系，要求丝绉横平竖直，上下两层无皱折、无虚量。由腋下袖隆最深处平行测量，左右双折边的距离乘2等于胸围尺寸。	Measure at the bottom of the armhole, measure parallel and straight from left to right. 2 times is finished chest.
腹围 (Stomach)			衣服摆放要求同胸围。以中腰最细处为准，（大袋高向上8—10cm处）平行测量左右双折边的距离乘2等于中腰围尺寸。	Take measurement at the narrowest part of the waist (8cm-10cm above the lower pockets), 2 times is finished stomach.
臀围 (Hip)			衣服摆放要求同胸围。以底摆边沿扒缝向上16cm平行测量左右折边的距离乘2等于臀围尺寸。	Take measurement 16cm above the bottom of the jacket. 2 times is finished hip.
肩宽 (Shoulder)			要求将后衣片上部铺好放平，或是将衣服挂好测量。以左肩端点身袖交合缝通过后背中心上端领处，顺量到左肩端点身袖交合缝的距离为总肩宽。	Take measurement from the left shoulder point, across center back neck and then to right shoulder point.
袖肥 (Bicep)			要求上下位置对齐铺平，上下两层，无皱折，无虚量，水平测量。以身袖交合缝最底部，水平测量，袖子两双折边的距离乘2等于袖肥周长。	Measure from the bottom crossing of sleeve and sideseam vertically to the other side of sleeve. 2 times is finished bicep.
外袖长 (Sleeve length)	左 (Left)		将外袖至上而下摆平，由肩端点垂直测量。最好用模特或衣褂将衣服挂好测量。以肩端点处的身袖交合缝向下垂直量到袖口边为外袖长尺寸。	Take measurement from shoulder point to the sleeve opening
	右 (Right)			
后衣长 (Back length)			要求将后衣片铺平，无皱折、无虚量，垂直测量，最好挂在衣褂上测量。由后背中心上端领处向下垂直量到底摆边的距离为后衣长。	Take measurement from the center back of the neck vertically to the hem of the jacket.

BOMOER

SHANGHAI

量体部位(Measuring parts)		量体示意图 (Pics)	中文描述	English Description
腰围 (Waist)			按要求将裤子臀腰部，舒展放平，挂钩、扣子系好，丝绉横平竖直，上下两层无皱折，无虚量，测量左右双折边的距离乘2等于腰围尺寸。	Take measurement along the top waistband from left to right. 2 times is finished waist.
臀围 (Hip)			要求将裤子臀腰部舒展放平，拉上拉链，系好挂钩，扣子，丝绉横平竖直，上下两层无皱折，无虚量。按腰头下沿两侧和中心向下约17cm距离要相等（两侧约在臀部最宽的位置）测量左右双折边的距离乘2等于臀围尺寸。	Take measurement 17cm under the top waistband of the pant at three points, left, right and center point (The fullest part of the pant), 2 times is finished hip.
腿围 (Thigh)			要求将裤管舒展放平，上下两层无皱折，无虚量，以裆底向下2.5cm水平测量，左右双折边的距离乘2等于横裆尺寸。	Take measurement 2.5cm under the bottom of crotch. 2 times is finished thigh.
通裆 (U-rise)			要求将裆部自然摆平，由前腰头上沿顺裆缝通过裆底“十字缝”顺量至后腰头上沿为通裆尺寸（前腰头上沿到裆底十字缝为前浪尺寸，裆底“十字缝”到后腰头上沿为后浪尺寸）。	Measure from the center front top waist down to the crossing of crotch and up to the center back top waist.
外裤长 (Pant outseam)	左 (Left)		要求将裤子叠好摆平，无皱折，无虚量，由腰头上沿延外侧缝垂直量止脚口折边的距离为外裤长尺寸。	Measure from the top waist to the bottom.
	右 (Right)			
脚口 (Bottom)			要求裤口对齐，上下两层无皱折，无虚量，顺边测量左右折边的距离乘2等于脚口周长。	Put the pant flat and measure the width of the bottom opening. 2 times is finished bottom.


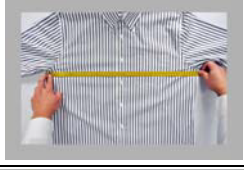
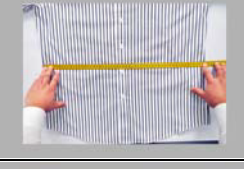


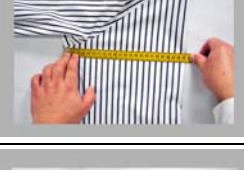



BOMOER

SHANGHAI

成衣尺寸(马夹) Finished Measurement--Vest			
量体部位 (Measuring parts)	量体示意图 (Pics)	中文描述	English Description
胸围 (Chest)		要求将衣服铺好放平，搭门叠好，系上扣子，丝绶要横平竖直，上下两层无皱折、无虚量。以袖隆底部平行测量左右双折边的距离乘2等于胸围尺寸。	Take measurement from the lowest part of the armhole, straight measured, 2 times is finished chest.
腹围 (Stomach)		要求同胸围的标准一样，以中腰最细处（通常在口袋后端的水平位置上）水平测量左右双折边的距离乘2等于中腰围尺寸。	Take measurement at the narrowest part of the vest waist (usually at the same level with pocket)
马甲后长 (Vest back length)		要求将后片铺平，由后领沿后背中缝量至底摆边的长度为后衣长。	Take measurement from the center back of the vest to the hem
第一粒扣距肩 (1st button from shoulder seam)		由肩缝里端沿领口量到第一粒扣中心。	Take measurement from neck shoulder point along the vest opening to the center of the first button.

BOMOER

SHANGHAI

		成衣尺寸(衬衣) Finished Measurement--Shirt		
量体部位(Measuring parts)		量体示意图 (Pics)	中文描述	English Description
领围 (Neck)			测量领子扣中到扣眼中的距离	Measure from center of button to center of buttonhole
胸围 (Chest)			要求将衣服舒展放平，搭门叠好，系上扣子，丝绉横平竖直，上下两层无皱折、无虚量。由腋下袖隆最深处平行测量左右双折边的距离乘2等于胸围尺寸。	Measure at the bottom of the armhole, measure parallel and straight from left to right. 2 times is finished chest.
腹围 (Stomach)			要求同胸围。以中腰最细处平行测量左右双折边的距离乘2等于中腰围尺寸。	Take measurement at the narrowest part of the waist, 2 times is finished stomach.
臀围 (Hip)			要求同胸围。以下摆处平行测量左右双折边的距离乘2等于摆围尺寸。	Measure the hem of the shirt, 2 times is finished hip.
肩宽 (Shoulder)			要求将衬衣前片按正常摆放平顺状态,由衬衣后面从左肩宽点顺后领口量至右肩宽点,即总肩宽。	Let the shirt be flat, measure from the back of the left shoulder point, across the center back neck and to the right shoulder point.
袖肥 (Bicep)			要求将袖子铺好放平，以袖隆底“十字缝”处垂直测量到袖肥折线乘2等于袖肥尺寸	Measure from the bottom crossing of sleeve and side seam vertically to the other side of sleeve. 2 times is finished bicep.
袖长 (Sleeve length)	左 (Left)		要求按过肩量平行将前后衣片自然摆平，由测量总肩的位置垂直向下测量到袖头边	Measure from the shoulder point to the bottom of sleeve
	右 (Right)			
袖头长 (Cuff)	左 (Left)		要求袖口伸开放平测量两边之间的距离。	Measure the distance between the cuff edges
	右 (Right)			
后衣长 (Back length)			由后领下沿中心垂直量到底摆边。	Take measurement vertically from the center back neckline to the hem.